


VERTICAL CURB TO WEDGE CURB

TRANSITIONS FROM WEDGE TO VERTICAL SHALL BEGIN AT ECR OR BCR WITH VERTICAL CURB CARRIED THROUGH RETURN

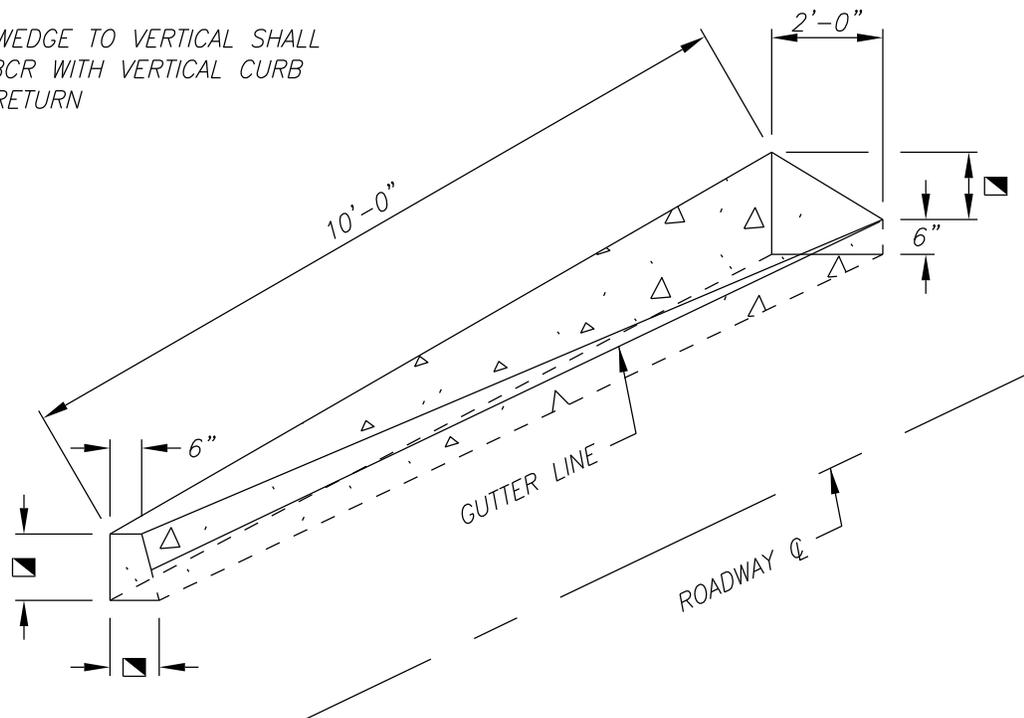

NOTE:

PAVEMENT WIDTH REMAINS CONSTANT THROUGH TRANSITION.

▣ THESE DIMENSIONS VARY, DEPENDING ON THE DESIGN REVEAL

VERTICAL CURB TO WEDGE CURB

ISSUED:		STANDARD DETAIL		DETAIL NO.
10/88		CONCRETE CURB		210
REVISED:		TRANSITION		SHEET 1 OF 1
09/12		PIMA COUNTY DOT		